



www.variotherm.com

VMONT5 | e51617

1.	Safety information	3
	1.1 General ∆	. 3
	1.2 Guarantee conditions $\Delta$	. 3
	1.3 Storage of pre-insulated Variomodular pipe 16x2 Laser $\Delta$ 1.4 Tray and grid $\Delta$	. 3 . 3
	1.5 Heating element 🛆	. 3
	1.6 Maximum Operating Pressure $\Delta$	. 3
2.	Preparation	4
	2.1 Overview of trench heating types	. 4
	2.2 Maximum length of heating element per heating circuit	. 4
	2.3 Tools	. 5
	2.4 Side strip	. 5
	2.5 Connecting the heating elements with the BKH2 and BKH2 mini	. 5
3.	Installation	6
	3.1 Grid	. 6
	3.2 Assembling a trench with mitres or extra length	. 6
	3.3 Window side	. 6
	3.4 Arrangement and alignment	. 6
	3.5 Fixing bracket	. 7
	3.6 Installation examples	. 7
4.	Connection	8
	4.1 Hydraulic connection on manifold system	. 8
	4.2 Hydraulic connection on 2-pipe system	. 9
	4.3 Connection examples with one heating circuit in the	
	trench heating system	12
	4.4 Connection examples with multiple heating circuits in the	
	trench heating system	13
5.	Protocols	14
	5.1 Leak-tightness test	14
	5.2 Commissioning	14

2. Vorbereitun

3. Einbau

# 1.1 General 🛆

These installation instructions are intended for authorised specialist personnel.

Observe the applicable local regulations and standards for electrical and heating installations.

# 1.2 Guarantee conditions $\Delta$

If the heating system is installed or commissioned incorrectly, all claims on the basis of the manufacturer's warranty and guarantee become void. Our currently applicable installation instructions are an integral part of our guarantee!

# 1.3 Storage of pre-insulated Variomodular pipe 16x2 Laser $\Delta$

The pre-insulated Variomodular pipe is an aluminium multi-layer composite pipe (100% oxygen diffusion-tight).

Damage (e.g. denting and scratching) is to be avoided during storage, transport, unloading, unwinding and laying. This type of damage has a detrimental effect on the creep behaviour.

In order to prevent damage to the Variomodular pipe during the construction phase, high-visibility warning signs should be placed at appropriate locations.

The interaction of the air's oxygen with UV rays damages the pipes, which should not be stored in the open air. Normal temporary storage on the construction site for a few days is permissible.

At low temperatures (< 5 °C) the Variomodular pipe should be stored in heated rooms prior to processing.

# 1.4 Tray and grid $\triangle$

Take care to avoid damage during storage, transport and installation.

The grid and the tray must be protected against contamination. Open the packaging by hand and not with sharp utensils. The grid should not be unpacked and inserted into the ducted channel until all installation and floor-laying work has been completed.



# 1.5 Heating element 🛆

The heating elements are supplied pre-installed in the trench. They must be protected against damage or unintentional bending of the louvres. During the construction phase, i.e. until commissioning, the cardboard covering (14 mm thick) is inserted into the tray instead of the grid.

The heating element consists of a copper pipe ø18 x 0.5 mm (DIN EN 12449) or a stainless steel pipe ø 18 x 1 mm (material 1.4521, DIN EN 10312/DIN EN 10236-2) with aluminium louvres 56 x 78 mm.

# 1.6 Maximum Operating Pressure $\Delta$

With Variotherm distribution manifold systems: max. 6 bar

With 2-pipe-system: max. 6 bar when using a Flexible Pipe Bend, otherwise 10 bar

# 2.1 Overview of trench heating types

Trench:	Aluminium side walls and end cover (black anodised), black-grey aluminium base, air baffles, heating element mounting bulkheads, interior adjustment screws for height adjustment, site strips green, fixing brackets
Length:	Custom length (with lengths > 5000 mm, the trench is supplied in segments)
Grid types:	Linear or roll grid, anodised aluminium, safe to walk on, standard colours: Aluminium-natur (EV 1), Hellbronze (C 32), Schwarz (C 35)
Heating element:	Copper pipe ø18 x 0.5 mm (DIN EN 12449) or stainless steel pipe ø 18 x 1 mm (material 1.4521, DIN EN 10312/DIN EN 10236-2) with aluminium louvres 56 x 78 mm







# 2.2 Maximum length of heating element per heating circuit

BKH1/BKH1 mini: max. 7.5 m (= 7.5 m heating element) BKH2/BKH2 mini: max. 5.0 m (= 10 m heating element) 2. Preparation

2.3 Tools



Additional tools that are required/recommended for installation work:



Pipe cutter for copper/stainless steel pipes







Drill / battery-powered screwdriver

2.4 Side strip

The side strips are pre-mounted on the end caps and enclosed in the side walls. These will be attached before installing the ducted channel.



# 2.5 Connecting the heating elements with the BKH2 and BKH2 mini



with solder fittings included



As an option: with Flexible Pipe Bend Tightening torque: 35 Nm Pressed using V18, SA18 press-fit contour 2. Vorbereitung

3.2 Assembling a trench with mitres or extra length

# 3.1 Grid

The grid should not be inserted into the trench until all installation and floor-laying work has been completed.

# Connecting elements

After plugging the parts together using the connectors, they are then screwed tight with the inserted grub screws. Allen key required: 3 mm.

The heating elements are soldered or pressed together (see table below).

The length of the air baffles must be adjusted in line with the connection piping.

Dine meterial	Support	Viega		Sanha		
ripe materiat	bracket	Press fitting	Press-fitting jaws	Press fitting	Press-fitting jaws	
Copper	Yes	Profipress Sanpress	V18	Pressfitting Serie 6000/8000	SA18	
Stainless steel	No	-	-	Pressfitting Serie 8000/9000	SA18	

# 3.3 Window side

Pay attention to the specified window side when positioning the ducted channel. This is also labelled on the side wall of the ducted channel.



Window side

# 3.4 Arrangement and alignment

Lay the Variotherm trench heating system in the correct arrangement with respect to the window. The maximum distance to the glass surface is 200 mm (allow for the flooring to be installed). The adjustment screws are used to align the trench level with the height of the finished floor (FFL). Allen key required: AF 4 x 137 mm

Note on free accessibility: Due to the distances between the interior adjustment screws of  $\leq$  500 mm, the trench can be accessed without further measures being required! (Load up to 130 kg/m at a adjustment screw distance of  $\leq$  500 mm).



6

# 3.5 Fixing bracket

Fix the trench with the fixing brackets on the ground.



# 3.6 Installation examples



Trench with clearance to window

Tip: We recommend the fabrication of a closed cover (e.g. a piece of parquet with the same external dimensions of the grid) to prevent soiling of the trench outside the heating periods. This is inserted instead of the grid in the summer months. Elastic joint compound or elastic sealing tape Floor covering (e.g. parquet) Underlay Side strip Screed Adjustment screws Thermal insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Floor covering (e.g. parquet) Control insulation and/or impact sound insulation Control insulatin Control insulation Control insulation Control insulation C

# 4.1 Hydraulic connection on manifold system

For installations with manifold systems, first lay the pre-insulated Variomodular pipes 16x2 Laser from the manifold to the trench heating and back, and then connect them to the manifold via a screw fitting. There must not be any kinks in Variomodular pipes when laying them and should be routed endlessly (i.e. without additional connection points) from the manifold to the skirting heating.

Electronic room thermostats and actuators are used to control the room temperature.





Laying example with Variotherm distribution manifold

### 4.1.1 Cutting to length, calibrating and bevelling the pre-insulated Variomodular pipe

The Variotherm pipe cutting pliers is used to cut the pipe to length.

Caution: The pipe must be cut at a right angle.

Rotate the calibration tool into the pipe to the stop angle to calibrate and bevel the end of the pipe. Visually check that the face of the pipe is smooth, clean and free of chips.



### 4.1.2 Feed to flow and return



- Pre-insulated Variomodular pipe 16x2 Laser
- 2 3/4"EUROx16 clamping screw fitting
- 30 90° angle piece 3/4"EURO or
- 🚯 Double nipple 3/4"EURO
- 4 18 x 17 mm support sleeve (only necessary with heating element with copper pipe!)
- 5 3/4"EUROxCu18 clamping screw fitting
- 6 Heating element (with copper pipe)

Connecting the supply pipe:

Push the clamping screw fitting 2 over the pre-insulated Variomodular pipe. 1 Then screw the clamping screw fitting with the angle piece 30 or double nipple 30 and tighten with 35 Nm.

### Connecting the trench:

Push the assembled clamping screw fitting (5) loosely over the copper pipe. Insert the support sleeve (2) into the copper pipe of the heating element. Important: Push the copper pipe into the angle piece (5) or double nipple (5) until it stops and tighten the screw fitting in this position with 40 Nm.

### 4.1.3 Deaeration

Deaeration is performed by flushing and the deaerators installed on the distribution manifold

### 4.1.4 Control and pressure test

Once all circuits have been connected to the heating manifold, the system can be filled downstream of the manifold and pressurised. The pre-insulated Variomodular pipes are to be kept under water pressure prior to applying the screed so that any damage becomes immediately visible.

Details regarding the system and heating circuit pipes and the room temperature control are provided in the DISTRIBUTION and CONTROL planning and installation instructions >>

# 4.2 Hydraulic connection on 2-pipe system

In the 2-pipe system, the trench heating is piped in accordance with the laying diagram using copper pipes, for example. The flow valve is installed with integrated deaeration in the flow side and the return valve is installed in the return side.

**Caution:** For reasons of space, with the BKH2 and BKH2 mini the flow valve is installed in the return and the return valve is installed in the flow (see connection example towards the end of page 12)





### 4.2.1 Anspeisung an Vorlauf und Rücklauf





1 E.g. copper pipe ø 18x1 mm

**2** 3/4"EUROxCu18 clamping screw fitting **3** Flow valve

e 🛛 4 Return flow valve

**(5)** 18 x 17 mm support sleeve (only necessary with heating element with copper pipe!)

6 Heating element (with copper pipe)

Push the assembled clamping screw fitting 2 loosely over the copper pipe. Insert the support sleeve 5 into the copper pipe of the heating element. **Important:** Cut the pipe straight/at right-angles, and push into the flow valve 3 or return flow valve 4 until the stop is reached. In this position, tighten the clamping screw fittings with 40 Nm.

### 4.2.2 Deaeration

The individual skirting heating systems are deaerated via the flow valves with integrated manual deaeration systems. The deaeration elbow is inserted in the return for valves without integrated deaeration systems. >>

# 1. Sicherheitshinweise

2. Vorbereitung

### 4.2.3 Flow valve

The flow valve with integrated deaeration is available in left, right or continuous versions.

On delivery, there is a protective plastic cap on the valve spindle. This allows the valve to be opened or closed without a valve head. Before mounting the valve head or the handwheel, the protective plastic cap is removed.





right-handed

Valve heads for flow valves



Characteristic curve for flow valve DN15 (1/2") with thermostat head; kv value 0.79; control difference xp 2 K



Sample calculation:

Required: Pressure loss for valve 1/2" at 2 K control difference Given: Heat flow Q = 1450 W, temperature spread  $\Delta t$  = 10 K (55/45 °C) Solution: Mass flow m = Q/(c· $\Delta t$ ) = 1450/(1.163·10) = 125 kg/h >> Pressure loss from diagram  $\Delta p$  = 26 mbar / 260 mmWC (0.26 mWC) / 2600 Pa 2. Vorbereitung

### 4.2.4 Return valve

The return valve is used for hydronic balancing and as a shut-off valve if the heating elements have to be dismantled (e.g. for painting). The valve spindle is under the protective cap. The return valve can be closed by rotating it.





Characteristic curve for return valve DN15 (1/2")



Sample calculation:

Required: alve opening (rotations) at a pressure loss via the return valve of  $\Delta p = 30$  mbar (0.30 mWC, 3000 Pa) Given: Heat flow Q = 1450 W, temperature spread  $\Delta t = 10$  K (55/45 °C) Solution: Mass flow m = Q/(c $\Delta t$ ) = 1450/(1.163·10) = 125 kg/h

>> Open the return valve 1.25 rotations

# 4.3 Connection examples with one heating circuit in the trench heating system

Connection to a Variotherm heating distribution manifold using a pre-insulated 16x2 Variomodular pipe Laser:



# 4.4 Connection examples with multiple heating circuits in the trench heating system

Connection to a Variotherm heating distribution manifold using a pre-insulated 16x2 Variomodular pipe Laser:



### Connection to a 2-pipe system:

Window side



# 5.1 Leak-tightness test

The entire piping (heating elements and supply pipes) must be subjected to a pressure test <u>before installation of the final floor cov-</u> <u>ering or application of the screed.</u> Furthermore, adequate precautions must be taken to prevent screed from entering the trench (cover all openings with suitable material). The cardboard cover provided (14 mm) must be used instead of the grid.

struction project:	
ding owner/Occupant:	
nt:	
ting installation technician:	
nitect:	
er:	

The Variotherm trench heating circuits are to be tested for leak-tightness using a water pressure test. The test pressure must be no less than 4 bar and no greater than 6 bar. If there is a risk of freezing, appropriate measures should be taken, e.g. use of anti-freeze and controlling the building's temperature.

Trench incl. grid, connection and piping completed on:						
• Pressure test started	st started on: with test pressure of bar					
• Pressure test finished	on:	with test pressure of	bar			
• The system water was treated (e.g. per ÖNORM H 5195-1, VDI 2035)				🗌 Yes	No	
• Antifreeze was added to the system water			🗌 Yes	No		
Heating started on:						
Approval:						
Building owner/Occupant/Client Construction management/Architect				Heating installation technician		

# 5.2 Commissioning

Before commissioning, remove the cardboard cover (14 mm) and insert the grid. The flow and return valves or the heating circuit shut-offs on the manifold must be opened The entire system is to be deaerated thoroughly. The circulation pump may be switched on after deaeration. After commissioning, the Variotherm trench heating system can be considered maintenance-free. (Subject to technical modifications without notice.)

NOTES	

## ENJOY THE COMFORT & SAVE ENERGY

That's why our customers love us: Heating and cooling optimised for COMFORT in all rooms! Fast and friendly service, ANSWERS backed up with expertise! Always in tune with the latest technology, INNOVATION guaranteed! Everything CLEAR and SIMPLE, in writing of course! PROFESSIONALISM at all times, from the first contact to the reference list!

## VARIOTHERM SINCE 1979

Variotherm is an Austrian model plant with hundreds of partners in Austria, Europe and around the world.



### VARIOTHERM HEIZSYSTEME GMBH

GÜNSELSDORFER STRASSE 3A 2544 LEOBERSDORF AUSTRIA

Phone: 0043 22 56 - 648 70-0 Fax: 0043 22 56 - 648 70-9

officedvariotherm.com www.variotherm.com